

COMFAST

Quick Installation Guide




Driver Installation
Version 1.0

1 Hardware installation


There are two ways to install the network card;

Note: The picture is a simplified schematic diagram, please refer to the actual product for details.

- (1) Insert the network card directly into the USB port of the computer;

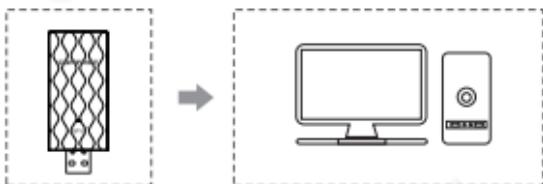


- (2) Connect the computer USB port through the USB extension cord base (USB extension base needs to be purchased separately);

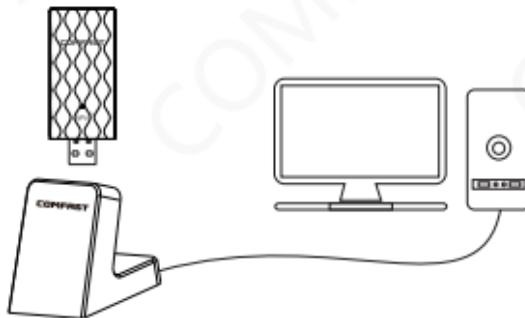


Note: When using a desktop computer, it is recommended to use a USB extension cord base to connect to the port on the back of the computer case (some desktop ports have insufficient power supply or cannot be used), and extend it to the Desktop computer usb ports.

2 Driver Installation


2-1 Open My Computer and double click on the NIC drive-free disk

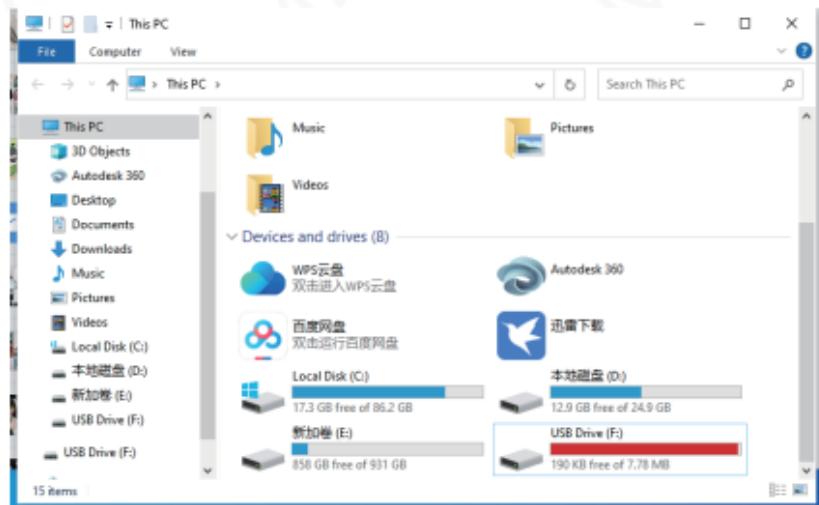


2-2 Double click WiFiAutoInstallSetup.exe to open the installer, select Next->install

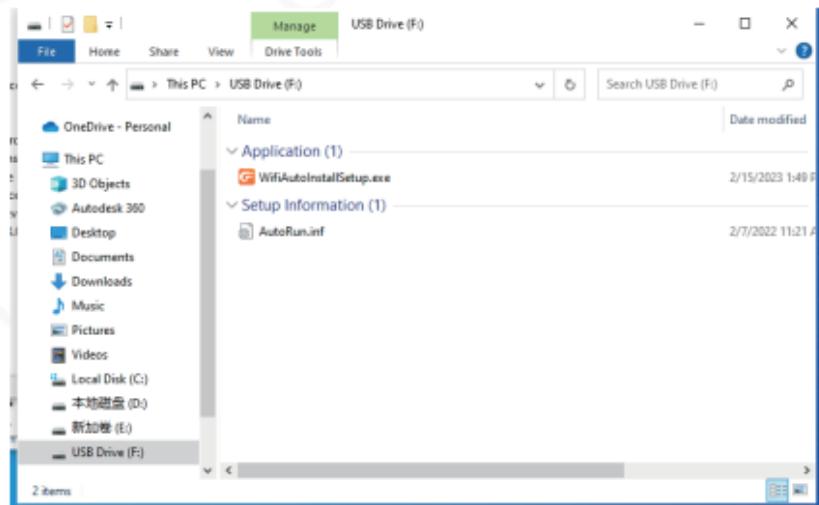


2-3 The program will automatically install the driver after opening

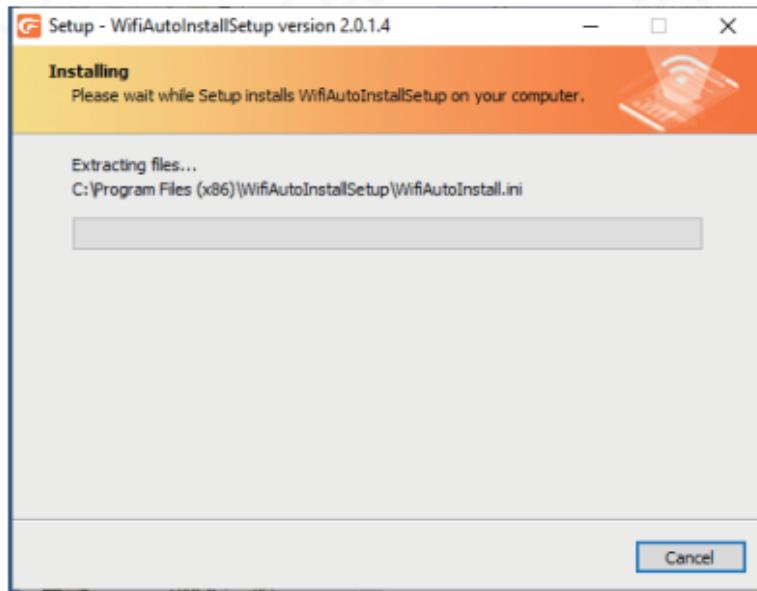


2-4 Driver installation is complete, you can move the mouse to My Computer, right click and then select Manage to enter the management interface to view the driver status

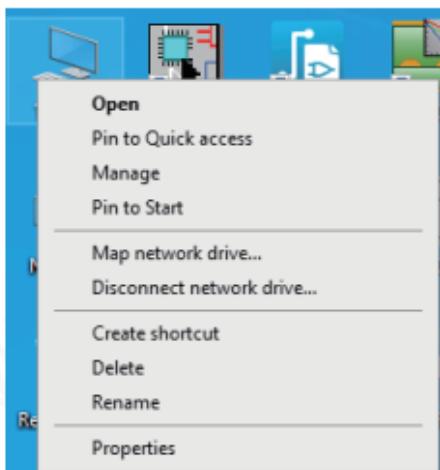

2-5 After entering the management page, click Device Manager, Network Adapters in order to see the installed NIC driver (Note: This step requires the NIC to remain connected to the computer before you can see it.)

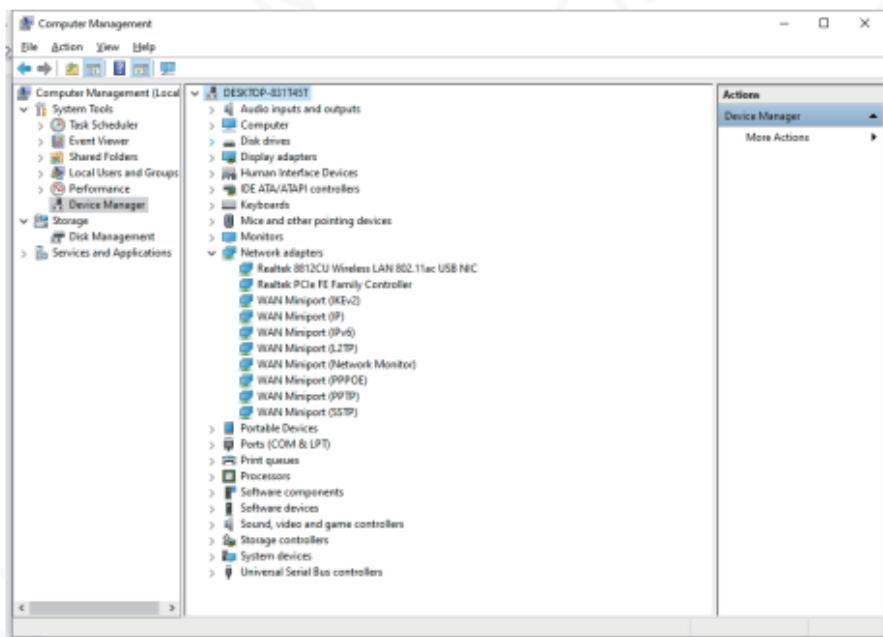

2-6 Double-click to view the device details, if there is no abnormality, the following figure shows that the driver is running normally and can view the driver details

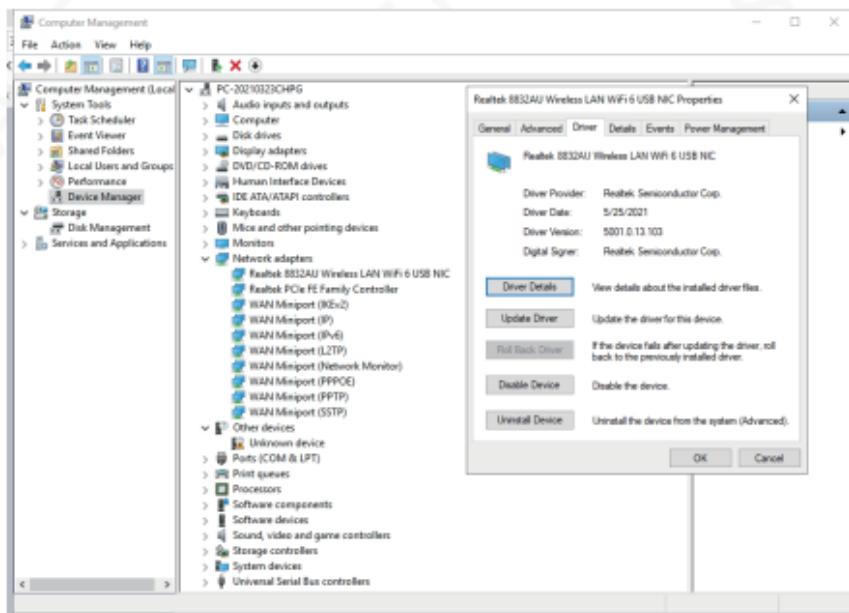

3 Network connection settings

3-1. After confirming that the driver is installed correctly, you can double-click the wireless card icon in the lower right corner, and left-click the icon to display the connected wireless computers.




3-2. Just click on the wireless network you want to connect to and enter the password to connect.




4 Network connection status

4-1. After the network connection, the computer system icon will change to  , and then you can right-click the icon and select "Open" Network and Internet "Settings" to enter the settings selection interface.

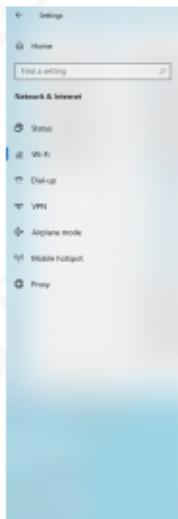

4-2 Click the "WLAN" option and then click Show connected wireless to view the current IP, MAC address, gateway, etc. of the wireless.

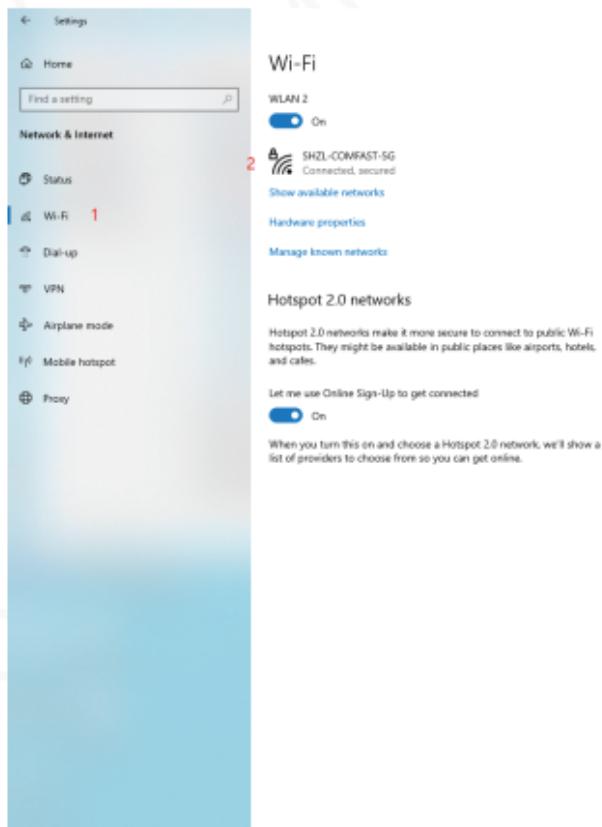

Maintenance Regulations

Dear Valued Clients,


Thank you for purchasing **COMFAST** products. To protect your rights and interests in after-sales service, please read the following maintenance regulations.

The following do not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage led to product failure or damage;
- Beyond the limited warranty , the warranty period; Unauthorized alteration, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or oxidation product of serious,etc;
- The damage caused by the transportation, loading and unloading caused by the customer's return for repair; the product failure or damage caused by force majeure such as earthquake, fire, lightning, etc.; Other non-product itself, design ,technology,manufacturing ,quality and other quality problems caused by the failure damage.

Customer Data

Name	
Address	
Model	
MAC No.	
Machine unit sales	
Sale of machine address	
Date of sale machine	
TEL	
Post Code	
Invoice No.	

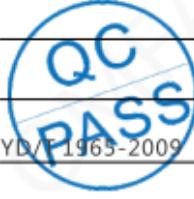Certificate Of Qualification	
Quality Inspector	
Production Date	
Executive Standard	YD/T 1965-2009
 A circular blue stamp with the text "QC" at the top and "PASS" at the bottom, with a diagonal line through it.	

Copyright Information

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.
Company all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company

Address: Room 607-610,Block B Tao JINDI Electronic Business Incubation Base, Tenglong Road, Longhua District, Shenzhen, China

Hotline: +86 755 83790059

Website: www.comfast.cn / www.szcomfast.com