


COMFAST

Quick Installation Guide



Wireless Router

1 Device Information

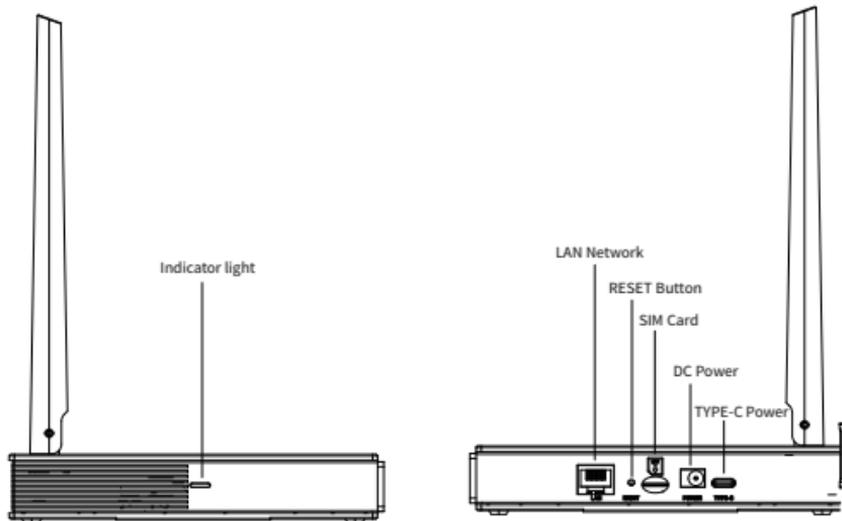

Explanation:

Indicator light:

 The light blue light is constantly on: It indicates that the equipment has been powered on and started

 The deep blue light is constantly on: It indicates that the device has recognized the SIM card and the 4G network is normal.

LAN: Supports direct connection to terminal devices via network cables.


SIM card slot: Supports insertion of Nano SIM cards (small cards).

RESET: Press and hold for 10 seconds to restore the factory Settings.

Power supply: Supports 12V 1A DC power supply/Supports TYPE-C 5V 2A power supply .

Note: The power supply cannot be provided in two ways simultaneously to avoid damaging the equipment.


2 Device Connection

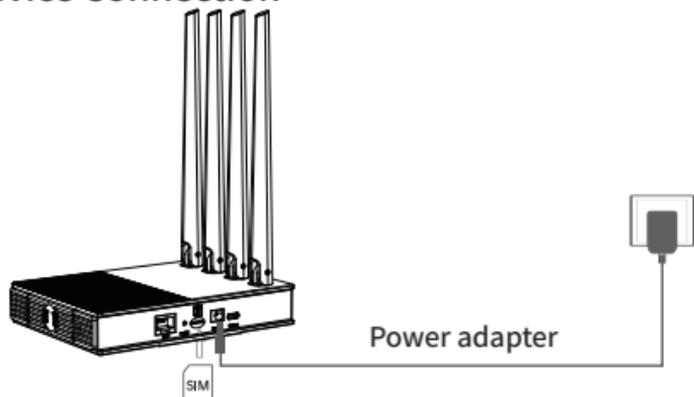


Pay attention to the direction of card insertion

3 Device Settings

- (1) Connect to the device's WiFi. The default is COMFAST-XXXX (XXXX corresponds to the last four digits of the MAC).
- (2) Enter 192.168.0.1 (the default username and password is admin) in the browser address bar and click log in.

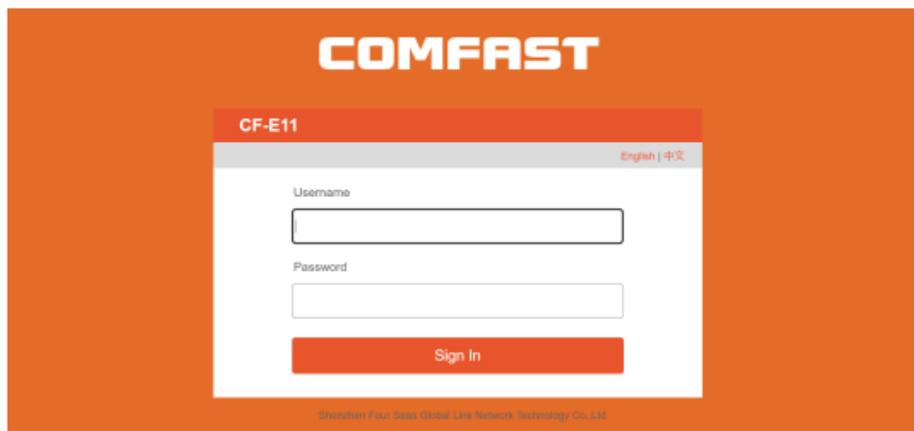

- (3) After logging in, you can view the current status information of the device, the current status of the SIM card, the current network information and the operator information at Home.

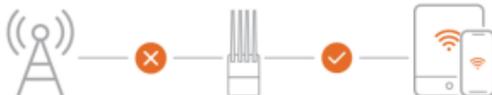

Internet	Router	Home Network	Auto APN List
Cellular Connection 3M Status: Absent	Router Information Router LAN IP: 192.168.0.1 IMEI: 353893293037109 ICCID: Router Network Mask: 255.255.255.0 Router MAC: E8:49:43:18:19:15 Run Time: 0 Day 0 Hour 4 Minutes 17 Seconds	Connected Devices 1 Wireless Enabled Wireless Settings Wireless Network: COMFAST-1915 Security Mode: None Channel Number: Automatic DHCP Server Enabled	MCC: MNC: Operator Name: APN: LTE APN: Network Type: 2030 Auth Type: 2030 User Name: 2030 Password: 4G Auth Type: 4G User Name: 4G Password: Ip Type: IPv4v6
	Software Information Software Version: COMFAST-E11-G-ON-V2.0.22 Hardware Version: GF-E11-V1.0.2		

(4) Select "Internet" - "Internet Connection", and you can modify the working network mode, connection mode, etc. After modification, click Save.

COMFAST	Home	Internet	LAN Setting	WiFi	Advance Setting
Internet Connection IP Type BAND PING Configuration Auto Reboot PIN Management Manual Network USSD	Internet Connection				?
	Network Mode 4G/3G Preferred LTE Type TD-LTE Preferred Connection Mode: Auto <input type="checkbox"/> prohibit automatic dial-up in the roaming status. Auto APN <input checked="" type="checkbox"/> Auto Configure APN PDN1 Settings: Manual APN Settings <hr/> <div style="text-align: right;">Save</div>				

(5) WiFi Settings: Select "WiFi" - "Wireless Security Settings", modify the WiFi name (network name), and for wireless security, you can choose "no encryption" or "Encrypted". If you select "Encrypted", enter the WiFi password and click "Save".

COMFAST Home Internet LAN Setting **WiFi** Advance Setting

Wireless Settings
Wireless Security Settings
Wireless MAC Filters

Wireless Security Settings

Network Name (SSID):
COMFAST-1616

Network Visibility Status:
 Visible Invisible

Wireless Security:
Disabled

Save

(6) Username Settings: Select "Advanced Settings" - "User Management", modify the username and password, and click Save.

COMFAST Home Internet LAN Setting WiFi **Advance Setting**

User Management
Configuration Management
Software Upgrade
Reboot Router

User Management

Router Username:
admin

Router Password:

Save

4 Common problems

- If the SIM card is not read:
 - (1) Please make sure the SIM card is inserted correctly.
 - (2) Please make sure the SIM card is inserted first, then power on, the order should not be messed up.
 - (3) Check whether the SIM card has added PIN lock, if there is a lock, please unlock the SIM card with your cell phone first.
- Some operators may prompt Unknown, but if the network access information and signal are normal, then it will not affect the Internet.
- If you need to set up APN account manually, please refer to your local operator's requirement to set up 4G dialing mode.

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a COMFAST products and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage lead to product failure or damage;
- Beyond the limited warranty , the warranty period;
Unauthorized alteratiion, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or serious oxidation of product ,etc;
- Other non-product itself, design ,technology,manufacturing, quality and other quality problems caused by the failure damage.

Certificate Of Qualification	
Quality Inspector	_____
Production Date	_____
Executive Standard	_____



A circular blue stamp with the text "QC PASS" in the center. Below the stamp, the text "QSHZ 006-2024" is printed.

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network Technology Co.,Ltd.
Company all rights reserved.**

Without our official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

COMARS is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc, are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.

Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China

Hotline: 0755 83790059/83790659

Website: www.szcomfast.com