



COMFAST

Quick Installation Guide



Wireless router
Instructions for Use 1.0

1 Device Information

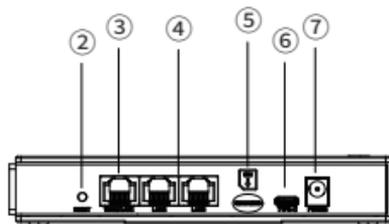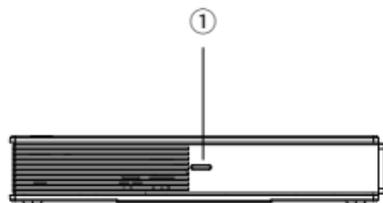

①Indicator light

When powered on and started up, the blue light remains on constantly, indicating that the system is on. After the system starts up normally, the blue light goes off.
The red light is constantly on :4G Internet access is unavailable.
The blue light is constantly on: The 4G network is normal and the WiFi is normal.
Blue light flashing: Wi-Fi device connected;

②RESET: Press and hold for 10 seconds to restore the factory Settings;

③WAN/LAN1: Adaptive port, supporting broadband connection devices/direct connection of network cables to terminal devices;

④LAN: Supports direct connection to terminal devices via network cables;


⑤SIM: Supports the insertion of Nano SIM cards (small cards).

⑥⑦ Power Supply: Supports 12V 1A DC power supply/Supports TYPE-C 5V 2A power supply and direct connection to terminal devices.


Note: The power supply cannot be provided in two ways simultaneously to avoid damaging the equipment.

2 device attachment

2-1 4G router connection

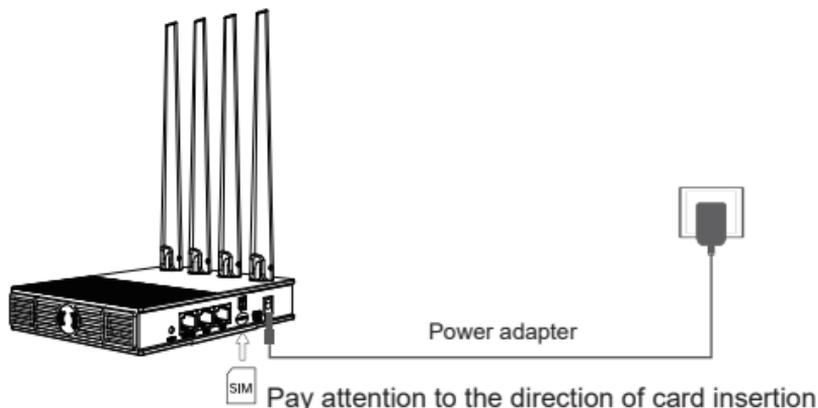

2-2 Ordinary Routing Connection (Broadband)

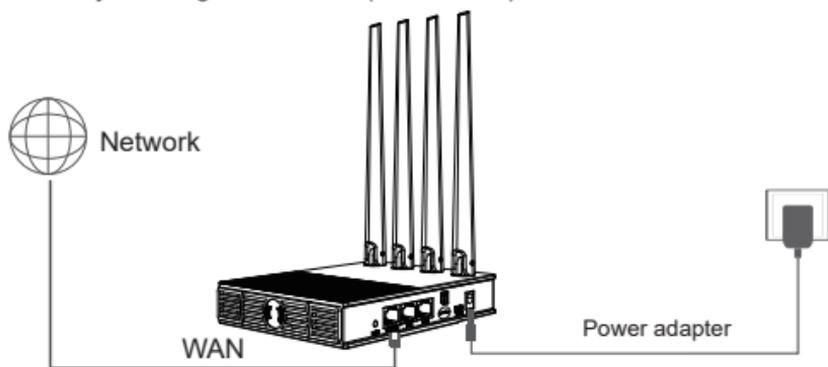

3 Steps for using a wireless router

3-1 Quick Usage Steps

- ① Insert the SIM card into the device;
- ② Connect the power adapter;
- ③ After the device starts up automatically and the system indicator light remains on constantly, you can connect to this device's COMFAST-XXXX(XXXX is the last 4 digits of the device's MAC).
- ④ If you need to change the WiFi password of your device, you can do so on the device's WEB management page. (The initial password for the WEB management interface can be obtained from the sticker on the device body.)

3-2 Connect the power supply



Please use the power adapter that comes with the original factory standard to power the 4G wireless router. Plug in the power and wait for a moment as it takes some time for the device to start up. After startup, the WiFi indicator light remains on constantly. After successfully registering for the 4G network, the 4G indicator light will remain on. At this point, you can use a computer, mobile phone or other terminals to connect to this device via WiFi(the WiFi name is COMFAST-XXXX(XXXX is the last four digits of the device's MAC)) or an Ethernet cable, and use 4G data to access the Internet.

4 Configuration of the router


If you need to manage and configure this router, you can connect it to the 4G wireless router via wireless or wired means. The default IP address of this router is 192.168.0.1. These network parameters can be modified according to the actual situation. The default values will be explained in the text.


4-1 Open the browser of your computer or smart phone/tablet. Enter the background IP address of the router 192.168.0.1 in the address bar to enter the background login interface. In the pop-up login window, enter the username/password: admin; Then click "Login".

Hint: The initial management username/password is: admin. Users can change the username/password after entering the system.

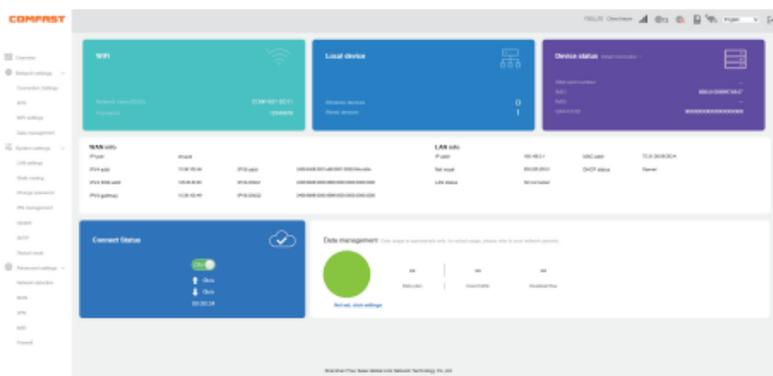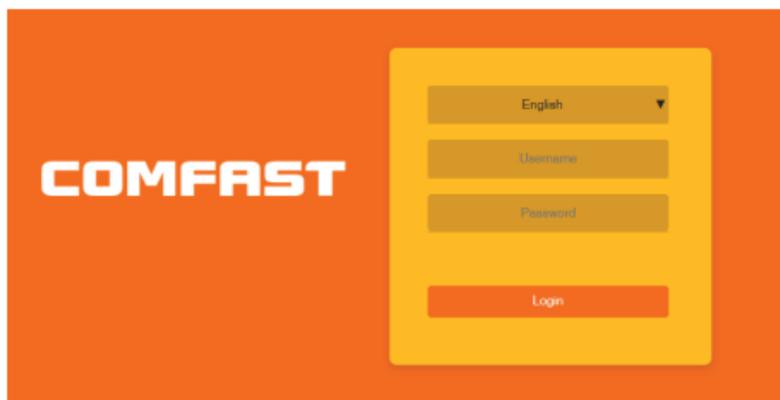


4-2 Click the "WiFi Settings" button on the home page to enter the WiFi Settings and you can obtain and set the basic WiFi information. And you can set the internal network IP of the device, the name of the wireless SSID, the wireless password, the channel bandwidth, the country, the channel, and other information. Click Save to complete the Settings.

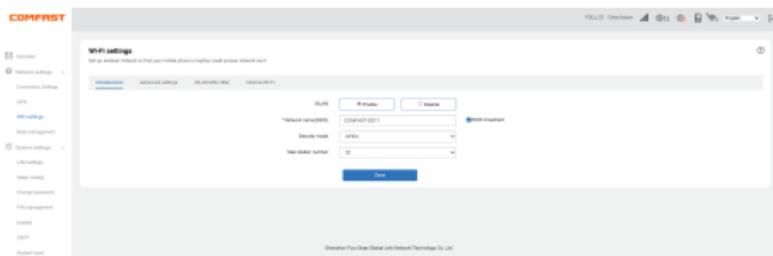


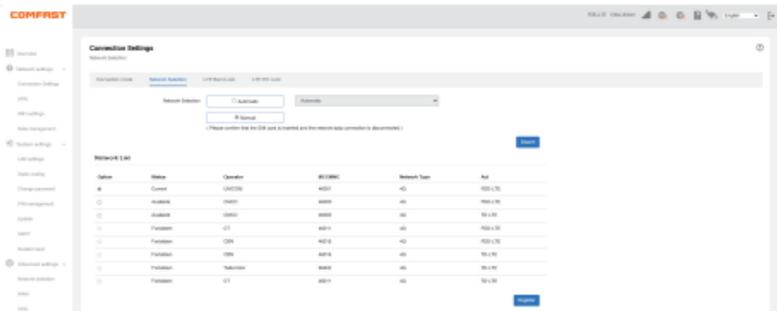

(3) VPN Settings: Please click on "Advanced Settings" - "VPN" on the left side of the homepage, and select the type of VPN to connect to. Then fill in the domain name, name, account, password and other information for connecting to the VPN server, and then click Enable.

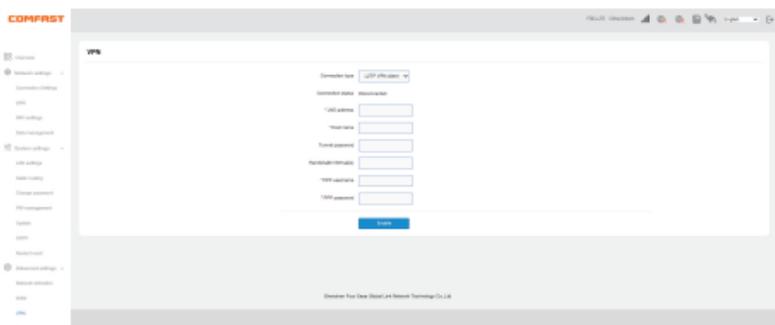

(4) Network Port Settings: Please click on "Advanced Settings" - "WAN" on the left side of the homepage to enter the Settings interface. WAN mode (Normal routing mode: Other networks provide network to the wireless router through network cables), LAN mode (this wireless router provides network to other routers through network cables), and automatic mode (this wireless router automatically detects network ports).

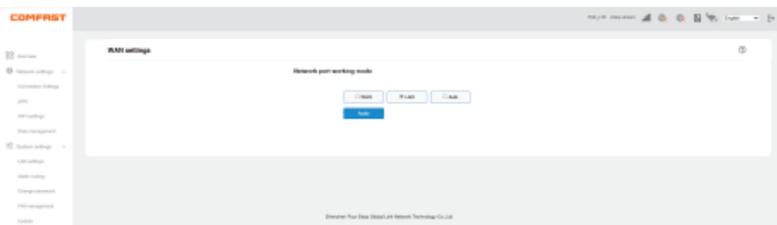

Maintenance Regulations


Dear Valued Clients,

Thank you for purchasing a COMFAST products and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage lead to product failure or damage;
- Beyond the limited warranty , the warranty period;
Unauthorized alteratiion, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or serious oxidation of product ,etc;
- Other non-product itself, design ,technology,manufacturing, quality and other quality problems caused by the failure damage.

Certificate Of Qualification	
Quality Inspector	_____
Production Date	_____
Executive Standard	_____

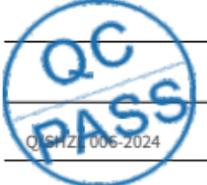

A circular blue stamp with the text "QC PASS" in the center. Below the stamp, the text "QSHZ 006-2024" is printed.

Copyright information

Statement

**Shenzhen Four Seas Global Link Network Technology Co.,Ltd.
Company all rights reserved.**

Without our official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

COMARS is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co., Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreements, this manual is used only as a user guide. All statements, information, etc, are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.

Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China

Hotline: 0755 83790059/83790659

Website: www.szcomfast.com