




Outdoor Wireless AP

Quick Installation Guide



Outdoor Wireless AP
M0304433 Version2.0

1. Please set automatically get ip for the computer , connect the ap lan port to the setting page.

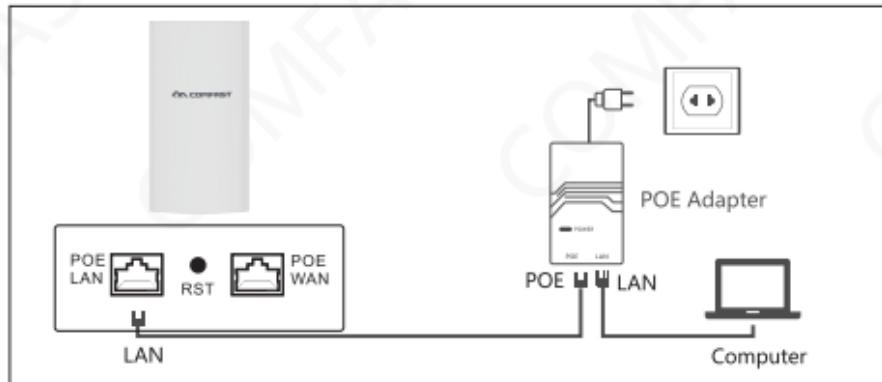

2. Set the computer to obtain the IP address automatically, and connect the LAN port of the device to the device management interface.

3. The device is defaulted to the interface Router mode. The steps to enter the setup page as follows:


(Note: Please connect the wireless network management page to the single network port device)

(1) Under default configuration, power on the device and wait for the device to start for 90 seconds.


(2) Connect device wireless SSID (default is COMFAST_XXXX_2G/ COMFAST_XXXX_5G, XXXX is the last 4 digits of the MAC).

(3) Input 192.168.10.1 in the web browser to get into the setting page.

(4) Open the computer browser, and input 192.168.10.1 to get into the device login page (Default username: admin Default password: admin). The device language is compatible with Chinese and English to choose, and you can set up the language by the top right corner icon.

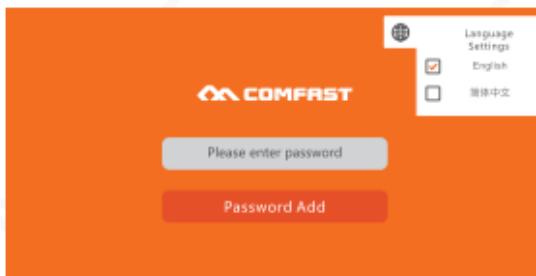

4. When getting into the setting page, there are four working modes in the Wizard: AP Mode, Bridge Mode, Router Mode, Repeater Mode.

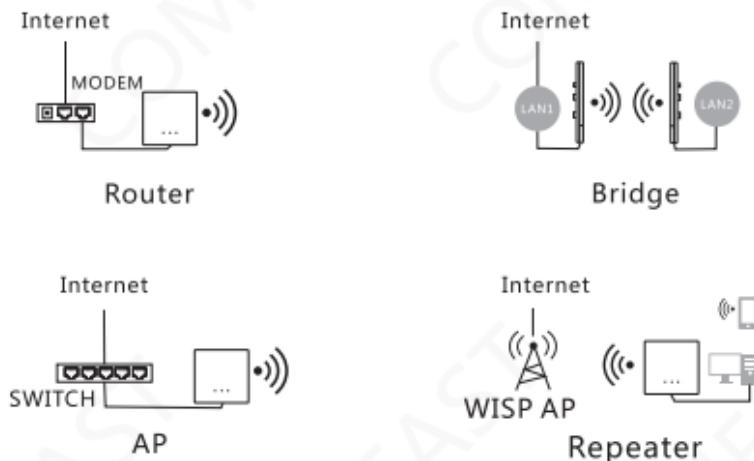

5. Click AP mode and set up IP Address and Subnet Mask. The IP address and Subnet mask should be within the same network segment as upper network and can't be conflict with IP address from upper network router. After settings, you can visit the device from the IP address you have set just now by connecting internet with WAN port of the device or POE adapter LAN port.


- ① Notes: In AP mode, the IP address from the other devices connected to the AP will be allocated by the upper network router.
- ② The AP needs to set an intranet IP address (do not set the same IP address as the upper router). If want to manage the device, Manually set the IP address of the same network segment of the intranet IP.

1 2 3 ✓

Lan Settings WiFi 2.4G WiFi 5.8G Finish

IP Address 192.168.10.1
Subnet Mask 255.255.255.0

Next

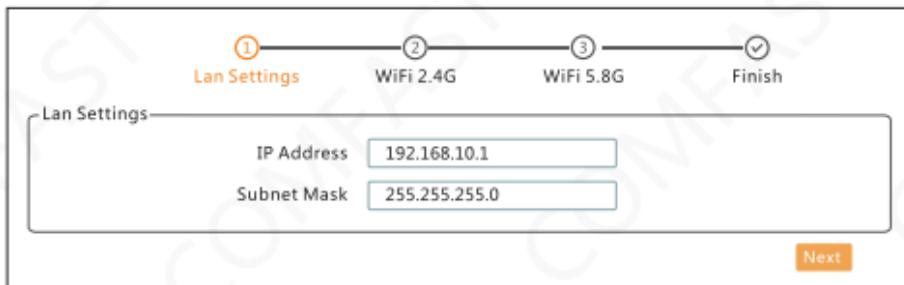

6. AP Mode: You can set up 2.4G/5.8G wireless SSID, password, channel and country in advance. After setting up, the device's WAN port or POE adapter LAN port connected internet, other mobile devices can connect the SSID to surf the internet.

1 2 3 ✓

Lan Settings WiFi 2.4G WiFi 5.8G Finish


2.4G Wireless

SSID COMFAST_E32B_2G
Password

Advanced Setting

Bandwidth 20MHz
Country China
Channel auto

Prev Next

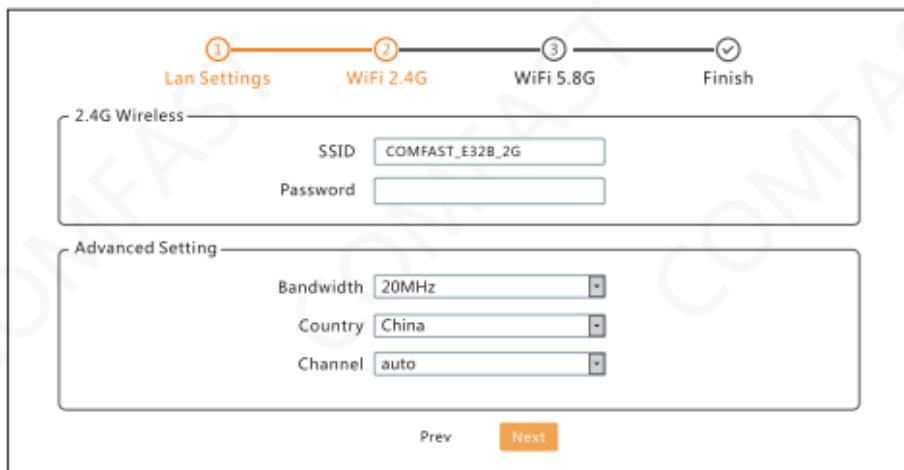

7. Bridge Mode: Pls ensure the WDS in upper network is enabled. AP device can set up intranet segment(do not set the same IP address as the upper router), and then select the wireless SSID signal you need to bridge(Distinguish between 5.8GHz and 2.4GHz) and input wireless password.
(Notes: The password is same as your upper network router)

① Lan Settings ② Bridge Settings ③ WiFi 2.4G ④ WiFi 5.8G ⑤ Finish

Lan Settings

IP Address: 192.168.10.1
Subnet Mask: 255.255.255.0

Next

Scan Results

Refresh

NO.	BSSID	SSID	Channel	Operation
1	40:A5:EF:84:E6:34	unknown	1	🔒 WiFi Edit
2	40:A5:EF:84:DE:64	unknown	1	🔒 WiFi Edit
3	40:A5:EF:85:4B:21	unknown	2	🔒 WiFi Edit
4	00:E0:4C:81:96:D1	2.4G_COMFAST_8796C2	2	WiFi Edit
5	40:A5:EF:84:E6:31	unknown	1	🔒 WiFi Edit
6	40:A5:EF:84:DE:61	unknown	1	🔒 WiFi Edit
7	40:A5:EF:80:97:36	E325N_809736	2	WiFi Edit

Please set the SSID and password for the device and click "Next" to finish settings.

① Lan Settings ② Bridge Settings ③ WiFi 2.4G ④ WiFi 5.8G ⑤ Finish

2.4G Wireless

SSID: COMFAST_E32B_2G
Password:

Prev Next

8. Repeater Mode: The AP device can set the internal network segment (the gateway IP should not be the same as the upper device gateway IP). Next, select the name of the wireless SSID signal that you need to relay (distinguish between 5.8GHz and 2.4GHz) and input wireless password.


(Notes: The password is same as your upper network router).

NO.	BSSID	SSID	Channel	Operation
1	40:A5:EF:84:E6:34	unknown	1	
2	40:A5:EF:84:DE:64	unknown	1	
3	40:A5:EF:85:48:21	unknown	2	
4	00:E0:4C:81:96:D1	2.4G_COMFAST_8796C2	2	
5	40:A5:EF:84:E6:31	unknown	1	
6	40:A5:EF:84:DE:61	unknown	1	
7	40:A5:EF:80:97:36	E325N_809736	2	

Please set the SSID and password for the device and click "Next" to finish settings.



9. Router Mode: There are three ways to surf the internet: PPPOE, Static, and DHCP. (Pls refer to router setting as reference)

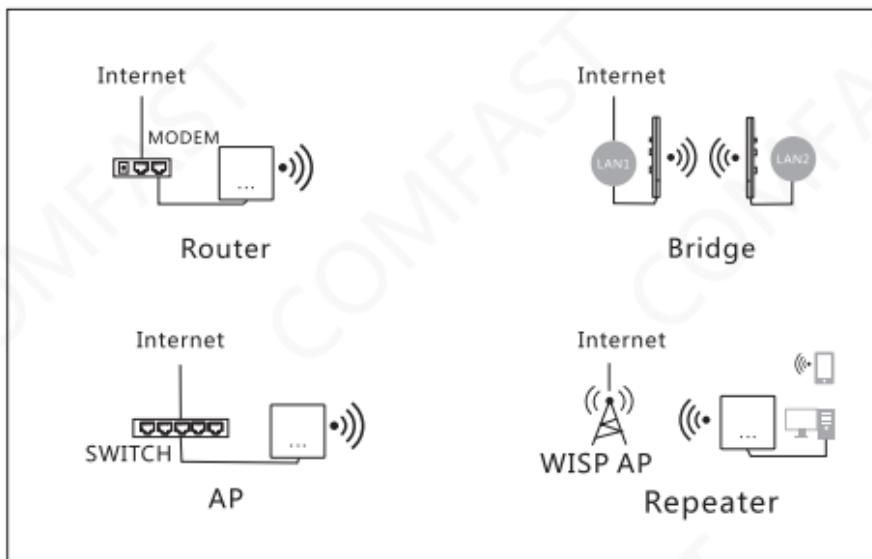

Copyright Information

Declaration

**Shenzhen Four Seas Global Link Network
technology Co., Ltd.**
All rights reserved.

No entities or individuals may copy, duplicate, transcribe or translate any part or all of this book without an express written permission of the Company.

No commodity shall be distributed in any form or by any means (electronic, mechanical, photocopied, recorded or otherwise possible), or used for any commercial activities and profit-making purpose.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network technology Co., Ltd. All other trademarks or registered trademarks referred to herein are owned by their respective owners. The product specifications and information in this manual are for reference only and is subject to change without prior notice. Unless otherwise specified, this manual is only used as a guide, and all statements and information contained in this manual do not constitute any form of warranty.

Manufacturer: Shenzhen Four Seas Global Link Network
technology Co., Ltd.

Address: Room 607-610, Block B TaoJinDi Building, Tenglong
Road, Longhua New District, Shenzhen, China

Hotline: +86 755 83790059

Website: en.comfast.com.cn