

COMFAST


Outdoor AP

Quick Installation Guide



Outdoor AP
Version 1.0

1. Please set automatically get ip for the computer , connect the ap lan port to the setting page.

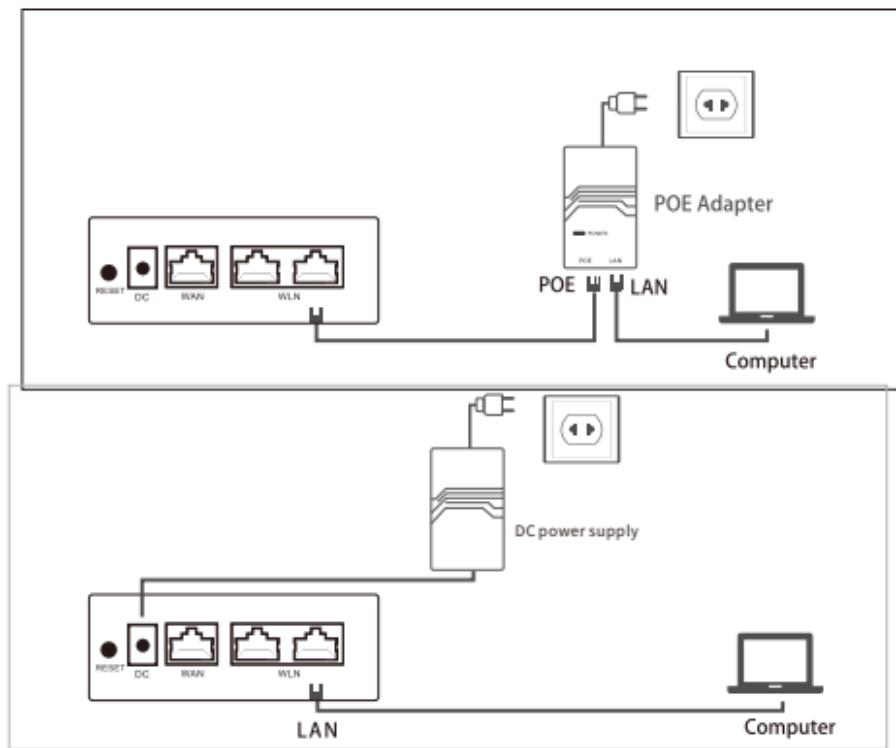

2. Set the computer to obtain the IP address automatically, and connect the LAN port of the device to the device management interface.

3. The device is defaulted to the interface Router mode . The steps to enter the setup page as follows:


(Note: Please connect the wireless network management page to the single network port device)

(1) Under default configuration, power on the device and wait for the device to start for 90 seconds.


(2) Connect device wireless SSID (default is COMFAST_XXXX_2G , COMFAST_XXXX_5G , XXXX is the last 4 digits of the MAC).

(3) Input 192.168.10.1 in the web browser to get into the setting page.

(4) Open the computer browser, and input 192.168.10.1 to get into the device login page (No initial password, the first time you need to set a password, and then enter the password to log in), The device language is compatible with Chinese and English to choose, and you can set up the language by the top right corner icon.

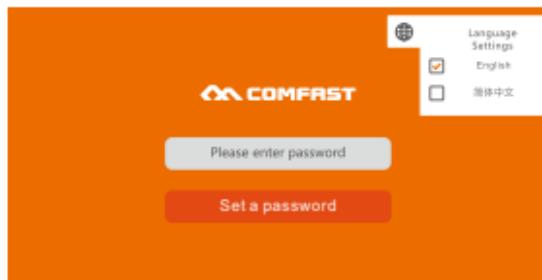

4. When getting into the setting page, there are four working modes in the Wizard: AP Mode, Bridge Mode, Router Mode, Repeater Mode.

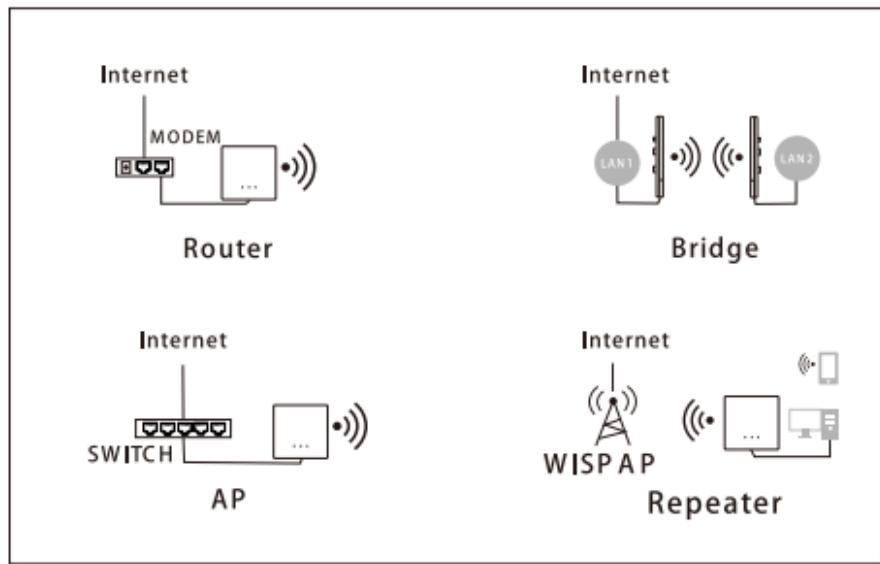

5. Click AP mode and set up IP Address and Subnet Mask. The IP address and Subnet mask should be within the same network segment as upper network and can't be conflict with IP address from upper network router. After settings, you can visit the device from the IP address you have set just now by connecting internet with WAN port of the device or POE adapter LAN port.

- ① Notes: In AP mode, the IP address from the other devices connected the AP will be allocated by the upper network router.
- ② The AP needs to set an intranet IP address (do not set the same IP address as the upper router). If want to manage the device, Manually set the IP address of the same network segment of the intranet IP.

1 2 ✓


Lan Settings Wireless Settings Finish

Lan Settings

IP Address 192.168.10.1

Subnet Mask 255.255.255.0

Next

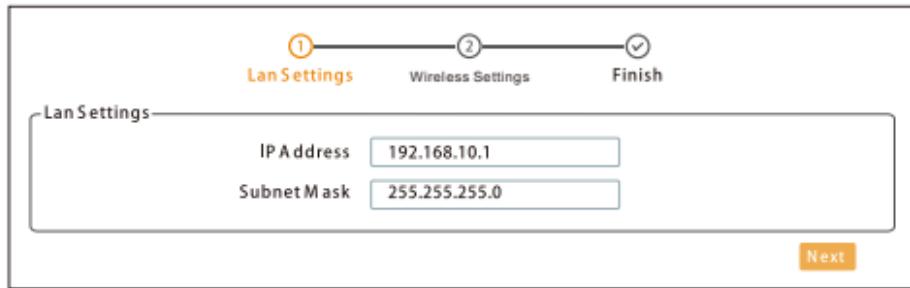

6. AP Mode: You can set up wireless SSID, password, channel and country in advance. After setting up, the device's WAN port or POE adapter LAN port connected to the internet, other mobile devices can connect to the SSID to surf the internet.

1 2 ✓

Lan Settings Wireless Settings Finish

2.4G Wireless

SSID COMFAST_E32B_2G

Password

Country China

Bandwidth 20MHz

Channel auto

5.8G Wireless

SSID COMFAST_E32B_5G

Password

Country China

Bandwidth 20MHz

Channel auto

Prev Next



7. Bridge Mode: Please ensure the WDS in the upper network is enabled. AP device can be set up in the intranet segment (do not set the same IP address as the upper router), and then select the wireless SSID signal you need to bridge and input wireless password.
(Notes: The password is the same as your upper network router)

① ————— ② ————— ③ ————— ✓

Lan Settings —————

IP Address: 192.168.10.1
Subnet Mask: 255.255.255.0

Next

Scan Results

Refresh

| NO. | BSSID | SSID | Channel | Operation |
|-----|-------------------|---------------------|---------|-------------|
| 1 | 40:A5:EF:84:E6:34 | unknown | 1 | 🔒 WiFi Scan |
| 2 | 40:A5:EF:84:D6:64 | unknown | 1 | 🔒 WiFi Scan |
| 3 | 40:A5:EF:85:48:21 | unknown | 2 | 🔒 WiFi Scan |
| 4 | 00:00:4C:81:96:D1 | 2.4G_COMFAST_8796C2 | 2 | WiFi Scan |
| 5 | 40:A5:EF:84:E6:31 | unknown | 1 | 🔒 WiFi Scan |
| 6 | 40:A5:EF:84:D6:61 | unknown | 1 | 🔒 WiFi Scan |
| 7 | 40:A5:EF:80:97:36 | E325N_809736 | 2 | WiFi Scan |

Please set the SSID and password for the device and click "Next" to finish settings.

① ————— ② ————— ③ ————— ✓

2.4G Wireless —————

SSID: COMFAST_E32B_2G
Password:

5.8G Wireless —————

SSID: COMFAST_E32B_5G
Password:

Prev Next

8. Repeater Mode: The AP device can set the internal network segment (the gateway IP should not be the same as the upper device gateway IP). Next, select the name of the wireless SSID signal that you need to relay and input wireless password.

(Notes: The password is same as your upper network router).

① Lan Settings ② Repeater Settings ③ Wireless Settings ④ Finish

Lan Settings

IP Address: 192.168.10.1

Subnet Mask: 255.255.255.0

Next

| NO. | BSSID | SSID | Channel | Operation |
|-----|-------------------|---------------------|---------|-----------|
| 1 | 40:A5:EF:84:E6:34 | unknown | 1 | |
| 2 | 40:A5:EF:84:DE:64 | unknown | 1 | |
| 3 | 40:A5:EF:85:48:21 | unknown | 2 | |
| 4 | 00:E0:4C:81:96:D1 | 2.4G_COMFAST_8796C2 | 2 | |
| 5 | 40:A5:EF:84:E6:31 | unknown | 1 | |
| 6 | 40:A5:EF:84:DE:61 | unknown | 1 | |
| 7 | 40:A5:EF:80:97:36 | E325N_809736 | 2 | |

Please set the SSID and password for the device and click "Next" to finish settings.

① Lan Settings ② Repeater Settings ③ Wireless Settings Finish

2.4G Wireless


SSID: COMFAST_E32B_2G
Password:

5.8G Wireless

SSID: COMFAST_E32B_5G
Password:

Prev

9. Router Mode: There are three ways to surf the internet: PPPOE, Static, and DHCP. (Please refer to router setting as reference)

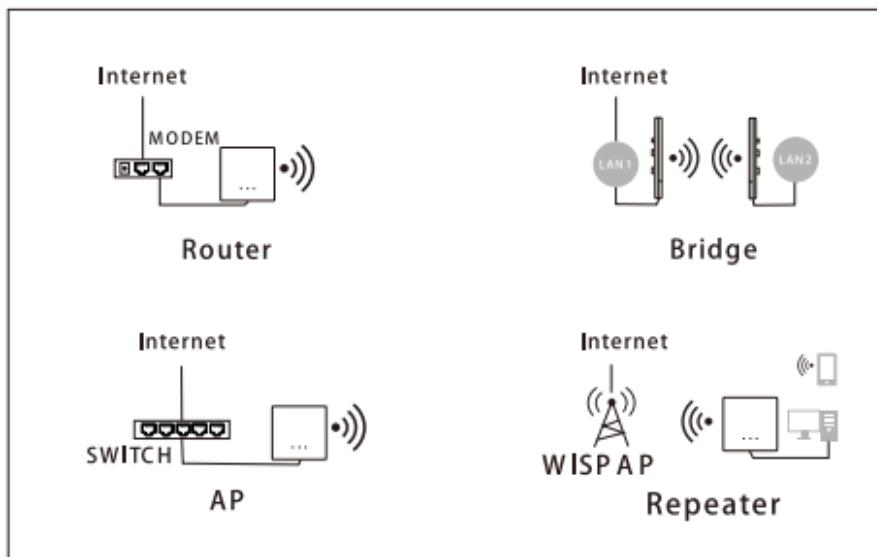

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network
Technology Co.,Ltd.Company
Address: Room 607-610,Block B Tao JINDI Electronic
Business Incubation Base, Tenglong Road, Longhua District,
Shenzhen, China
Hotline: 0755 83790059/83790659
Website: www.szcomfast.com