

**COMFAST**


**Outdoor AP**

**Quick Installation Guide**



Outdoor AP

1. Please set automatically get ip for the computer , connect the ap lan port to the setting page.

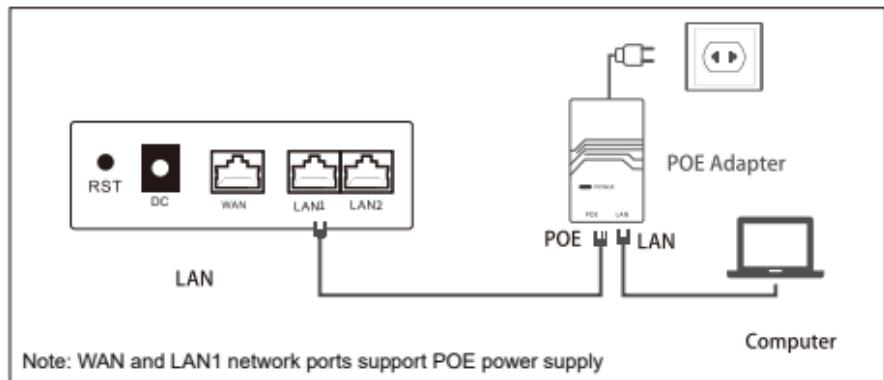

2. Set the computer to obtain the IP address automatically, and connect the LAN1 port of the device to the device management interface.

3. The device is defaulted to the interface Router mode .The steps to enter the setup page as follows:


(Note: Please connect the wireless network management page to the single network port device)

(1)Under default configuration, power on the device and wait for the device to start for 90 seconds.


(2)Connect device wireless SSID (default is COMFAST\_XXXX\_2G or COMFAST\_XXXX\_5G,XXXX is the last 4 digits of the MAC).

(3)Input 192.168.10.1 in the web browser to get into the setting page.

(4) Open the computer browser, and input 192.168.10.1 to get into the device login page (Default username:admin, Default password:admin).The device language is compatible with Chinese and English to choose, and you can set up the language by the top right corner icon

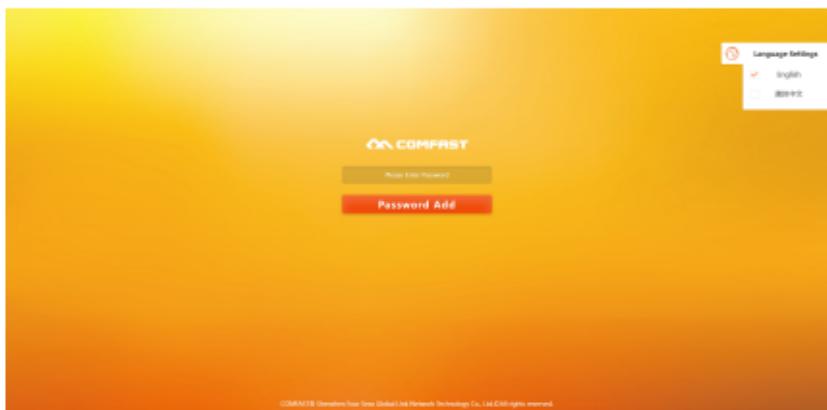

4. When getting into the setting page, there are four working modes in the Wizard: AP Mode, Bridge Mode, Router Mode, Repeater Mode.

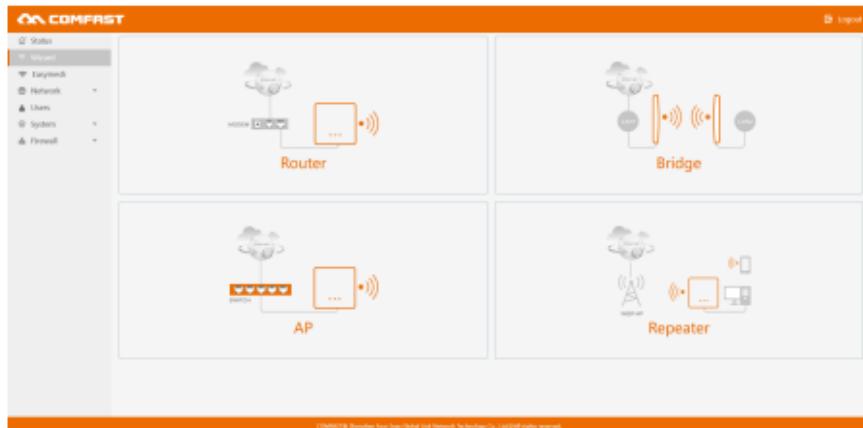


5. Click AP mode and set up IP Address and Subnet Mask. The IP address and Subnet mask should be within the same network segment as upper network and can't be conflict with IP address from upper network router. After settings, you can visit the device from the IP address you have set just now by connecting internet with WAN port of the device or POE adapter LAN port.

- ① Notes: In AP mode, the IP address from the other devices connected the AP will be allocated by the upper network router.
- ② The AP needs to set an intranet IP address (do not set the same IP address as the upper router). If want to manage the device, Manually set the IP address of the same network segment of the intranet IP.



6.AP Mode: You can setup 2.4G wireless SSID, password, channel and country. After setting up, the device's WAN port or POE adapter LAN port connected to the internet, other mobile devices can connect to the SSID to surf the internet.

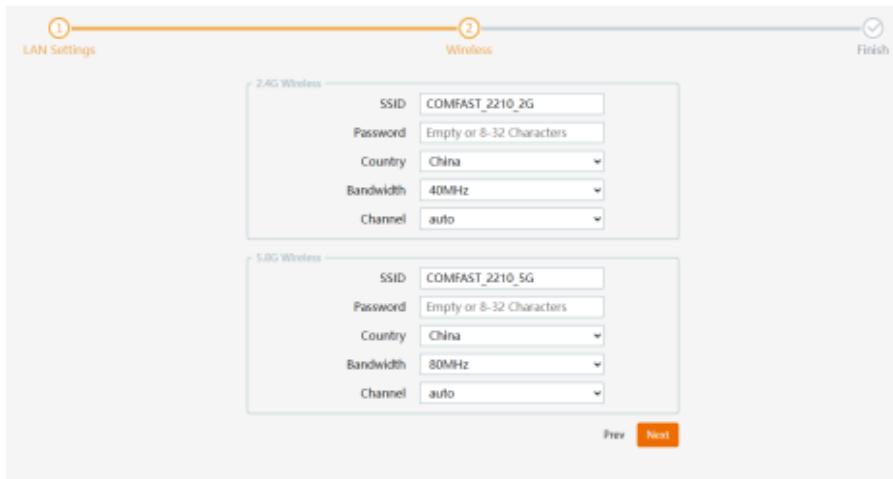

Wireless setup wizard step 2: Wireless settings

2.4G Wireless


SSID	COMFAST_2210_2G
Password	Empty or 8-32 Characters
Country	China
Bandwidth	40MHz
Channel	auto

5.8G Wireless

SSID	COMFAST_2210_5G
Password	Empty or 8-32 Characters
Country	China
Bandwidth	80MHz
Channel	auto

Prev Next

7.Bridge Mode: Please ensure the WDS in the upper network is enabled. The AP device can set up an intranet segment (do not set the same IP address as the upper router), and then select the wireless SSID signal you need to bridge and input the wireless password. (Note: The password is the same as your upper network router)

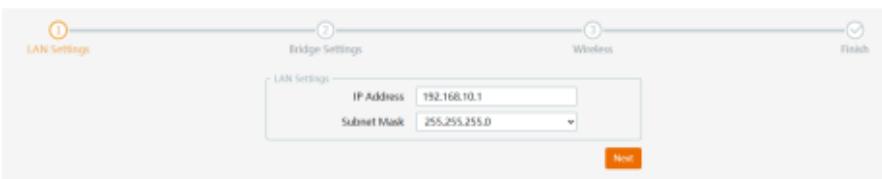

Bridge mode setup wizard step 2: LAN settings

LAN Settings

IP Address	192.168.10.1
Subnet Mask	255.255.255.0

Next

### Scan Result

[Refresh](#)

No.	BSSID	SSID	Channel	Oper
1	00:0C:43:26:16:00	COMFAST_0000_5G	60	✓
2	42:A5:EF:BE:77:81	COMFAST_7781_5G	149	✓
3	00:0D:4C:86:70:01	ChinaNet-5G-867001	165	✓
4	E0:E1:A9:0D:EB:C6	gg-AX3000-5G	165	✓
5	40:A5:EF:4C:C5:95	COMFAST_C592_5G	52	✓
6	42:A5:EF:BE:77:5D	COMFAST_775D_5G	149	✓
7	42:A5:EF:BE:77:63	COMFAST_7763_5G	149	✓
8	70:4A:14:15:34:A4	COMFAST_34A1_5G	60	✓
9	40:A5:EF:4C:BF:F5	ComWave-BFF2-5.8G	36	✓
10	40:A5:EF:BC:DF:35	COMFAST_DF32_5G	44	✓
11	40:A5:EF:B1:B2:86	COMFAST_B2B3_5G	36	✓

### Scan Result

[Refresh](#)

No.	BSSID	SSID	Channel	Oper
1	00:0D:4C:8B:B1:C1	COMFAST_BBB1C2	10	✓
2	E0:E1:A9:0D:EB:C5	gg-AX3000-2G	1	✓
3	40:A5:EF:4C:C5:94	COMFAST_C592_2G	1	✓
4	40:A5:EF:6A:6F:1D	西沙_2G	1	✓
5	40:A5:EF:FE:77:5D	COMFAST_775D_2G	1	✓
6	40:A5:12:3C:CC:DF	6666666666	6	✓
7	40:A5:EF:FF:D2:A6	AAApple_2G	9	✓
8	40:96:B3:24:19:AA	COMFAST_19A8_2G	1	✓
9	D0:C7:0C:52:EE:37	TP-LINK_EE37**^**	11	✓
10	90:9B:3B:45:90:88	黑\ta5dfGh\kL	1	✓
11	04:0F:0E:0D:AA:03	ITMS-1-AA01-2G	1	🔒

Please set the SSID and password for the device and click "Next" to finish settings.

Wireless

2.4G Wireless

SSID: COMFAST\_2210\_2G  
Password: Empty or 8-32 Characters


5.8G Wireless

SSID: COMFAST\_2210\_5G  
Password: Empty or 8-32 Characters

Prev [Next](#)

8.Repeater Mode:The AP device can set the internal network segment (the gateway IP should not be the same as the upper device gateway IP). Next, select the name of the wireless SSID signal that you need to relay and input wireless password.

(Notes:The password is same as your upper network router).

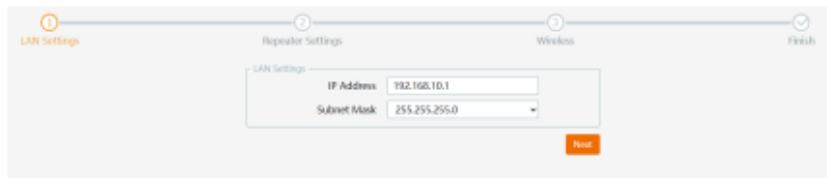

**Scan Result**

**Refresh**

No.	BSSID	SSID	Channel	Oper
1	00:E0:4C:88:81:C1	COMFAST_8881C2	10	✓
2	E0:E1:A9:0D:EB:C5	gg-AX3000-2G	1	✓
3	40:A5:12:34:AB:CF	gg-AX3000-2G-plus	9	✓
4	40:A5:EF:4C:C5:94	COMFAST_C592_2G	1	✓
5	40:A5:EF:5A:6F:1D	流沙_2G	1	✓
6	40:A5:12:3C:CC:DF	6666666666	6	✓
7	40:A5:EF:FF:D2:A6	AAApple_2G	9	✓
8	40:A5:EF:FE:77:69	COMFAST_7769_2G	1	✓
9	40:96:B3:24:19:AA	COMFAST_19AB_2G	1	✓
10	40:A5:EF:4C:BF:F4	ComWave-BFF2-2.4G	11	✓
11	40:A5:EF:B1:B2:B5	COMFAST_B2B3_2G	1	✓

**Scan Result**

**Refresh**

No.	BSSID	SSID	Channel	Oper
1	00:0C:43:26:16:00	COMFAST_0000_5G	60	✓
2	42:A5:EF:BE:77:81	COMFAST_7781_5G	149	✓
3	E0:E1:A9:0D:EB:C6	gg-AX3000-5G	165	✓
4	42:A5:EF:BE:77:80	COMFAST_7780_5G	149	✓
5	40:A5:EF:4C:C5:95	COMFAST_C592_5G	52	✓
6	42:A5:EF:BE:77:5D	COMFAST_775D_5G	149	✓
7	42:A5:EF:BE:77:63	COMFAST_7763_5G	149	✓
8	70:4A:14:15:34:A4	COMFAST_34A1_5G	60	✓
9	42:A5:EF:BE:77:A5	COMFAST_77A5_5G	149	✓
10	40:A5:EF:4C:BF:F5	ComWave-BFF2-5.8G	36	✓
11	40:A5:EF:BC:DF:35	COMFAST_DF32_5G	44	✓

Please set the SSID and password for the device and click "Next" to finish settings.

1 LAN Settings 2 Repeater Settings 3 Wireless 4 Finish

2.4G Wireless

SSID: COMFAST\_2210\_2G  
Password: Empty or 8-32 Characters

5.8G Wireless

SSID: COMFAST\_2210\_5G  
Password: Empty or 8-32 Characters

Prev Next

9. Router Mode: There are three ways to surf the internet. PPPoE, Static, and DHCP (Please refer to the router settings as a reference)

1 WAN Settings 2 LAN Settings 3 Wireless 4 Finish

WAN Settings

PPPoE  Static  DHCP

IP Address: automate  
Subnet Mask: automate  
Gateway: automate  
DNS: automate

Next

# **Quick Installation Guide**

## **Statement**

**Shenzhen Four Seas Global Link Network  
Technology CO.,Ltd.Company  
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

**COMFAST** is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network  
Technology Co.,Ltd.Company

Address: 9th Floor, Building H, Huanan Digital Valley, No. 1  
Huanan Road, Longhua District, Shenzhen, China

Hotline: 0755 83790059/83790659

Website: [www.szcomfast.com](http://www.szcomfast.com)