


COMFAST

Quick Installation Guide



Version1.0
M0401077

1 Hardware Installation

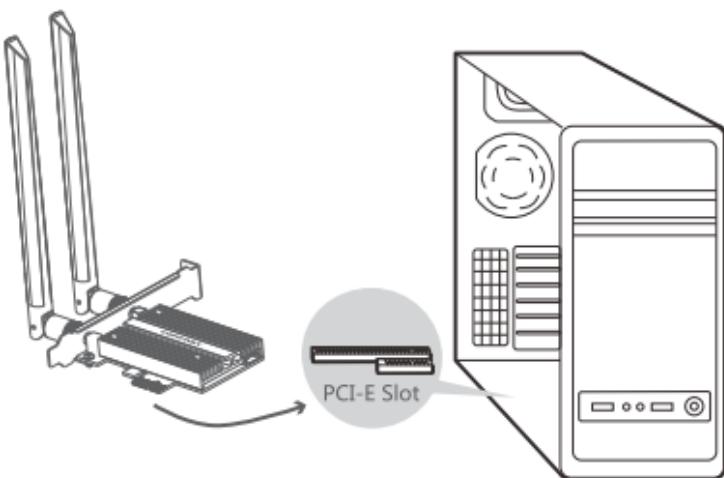

1. Turn off the desktop PC and disconnect the power.
2. Open the main chassis, select an empty PCI-E slot on the motherboard, and remove the corresponding slot on the rear panel of the PC.
3. Insert the PCI-E NIC into the selected PCI-E slot and verify that all NIC pins are in contact with the slot; then secure the NIC to the chassis with screws; finally close the chassis
4. Plug in the PC again and turn on the PC.

Supported Operating Systems:


- Only supports windows 10 operating system

*The product shape is for reference only, please refer to the actual product

2 Driver Installation

1. open the corresponding driver folder, double-click "Setup.exe" to run the installer, you can complete the installation. (Note: If the installation file is a compressed package, you need to extract it to install it)

Driver download: enter "<http://www.szcomfast.com>"
Click on the navigation bar Search for the corresponding model in the "Service Center" search bar, for example: "CF-WP1300 V2" and "Click to download".

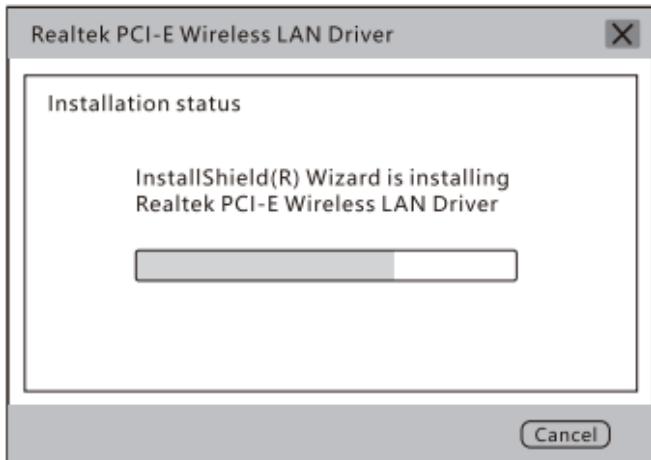

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing **COMFAST** products. To protect your rights and interests in after-sales service, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage led to product failure or damage;
- Beyond the limited warranty , the warranty period; Unauthorized alteration, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassembly;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or oxidation product of serious,etc;
- Other non-product itself, design ,technology, manufacturing,quality and other quality problems caused by the failure damage.

Customer Data

Name	
Address	
Model	
MAC No.	
Machine unit sales	
Sale of machine address	
Date of sale machine	
TEL	
Post Code	
Invoice No.	

Certificate Of Qualification

Quality Inspector

Production Date

Executive Standard



Copyright Information

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company
Address: Room 607-610,Block B Tao JINDI Electronic Business Incubation Base, Tenglong Road, Longhua District, Shenzhen, China
Hotline: +86 755 83790059
Website: en.comfast.com.cn