

COMFAST

Quick Installation Guide




Wireless Extender/repeater
Version V2.0

1 The product description



1.1 This is a supplement of wireless LAN network, which could expand the scale of WIFI. It is useful, convenient and easy to install.



Wireless Router

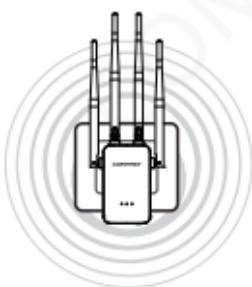

1.2 Structure Description

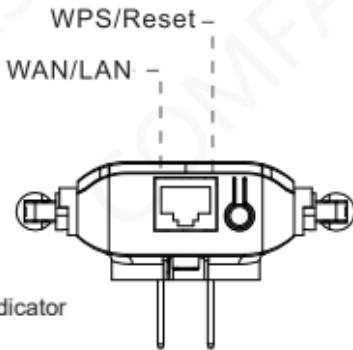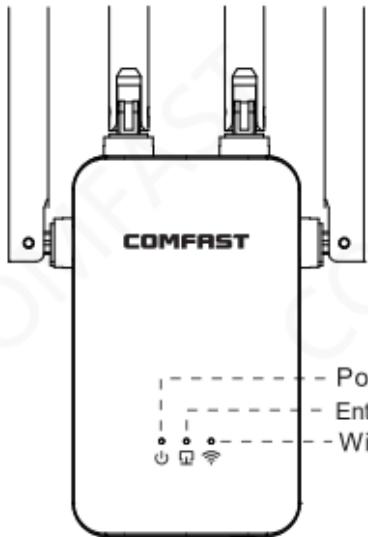

WPS/Reset: Press the less than 5 seconds to use WPS auto pairing; Long press for more than 10 seconds to reset to factory settings.

1. Unplug..... from lightning damage.
2. Keep the device away from heat and keep ventilation
3. Please pay attention to waterproof when storing, transporting and operating.

Warning




2 Product Installation

Notice: If the router has WPS button, you'd better choose the WPS "one key to repeater" to set up (See 2.1.1). If not, pls enter the IP address 192.168.10.1 to set up (See 2.2.1).

2.1 Press WPS on repeater and match automatically

2.1.1 Plug the wifi repeater on outlet near the wifi router. Press the WPS button on the main router for 1 - 2s. Then, press the WPS button on the repeater for 1 - 2s within 50s(ASAP). Wait for about 30s, the repeater will repeat automatically. The WIFI lamp will go out for a while and light up again when repeat successfully. Finally, a new extended WiFi named as "your original wifi name-Plus" will show on your wifi list. (eg: xxxx-Plus)

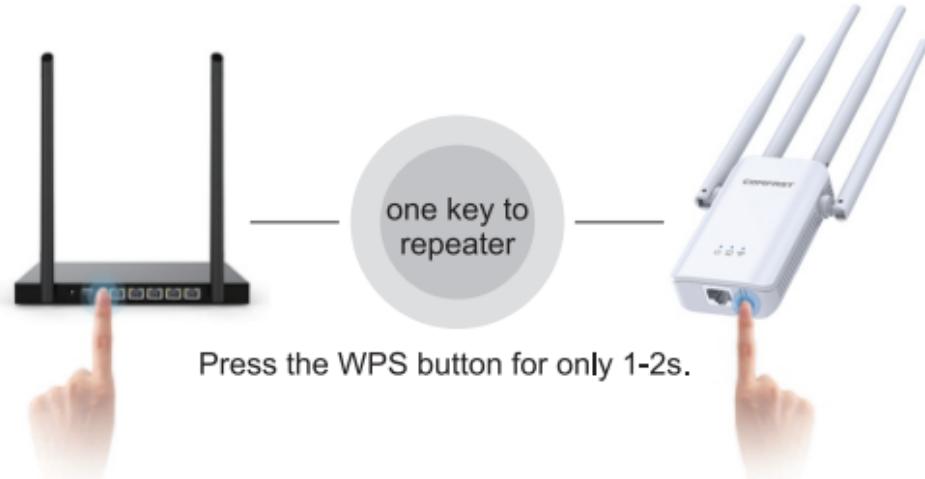

Please make sure that the device was not connected with other routers' network before using WPS. If connected, press the RESET button to restore factory settings and then start to use WPS.

Notice:

Please check if the router has WPS or QSS button

Please check the WPS function on the router is enabled. (Enter the router's interface to check.)

2.2 Input IP Setting

2.2.1 Plug the wifi repeater on outlet. Connect the WiFi name of “COMFAST_xxxxxx” with your mobile.(cell phone or tablet)





2.2.2 Open browser, input 192.168.10.1, then get in ,and input user name and password “admin”.



Transfer the default language Chinese to English, enter the default password “admin” and click the “Log In” to enter the setting page.

- ① Pls select a WiFi that you want to extend (If no WiFi signal available, please click Scan again)
- ② Pls enter WiFi password from your router and click connect.(New WiFi name can be default)
- ③ Extending successfully, pls wait 1 minutes to complete resetting and connect the WiFi again, you can surf the internet.

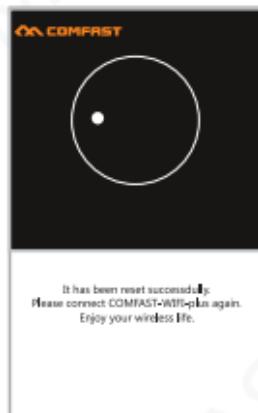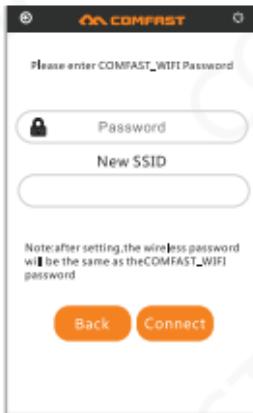

Description:

More function(eg: AP mode, router mode), pls set up with PC: connect it to the WAN port of the PC with the included internet cable and enter IP address 192.168.10.1 to website entry, you can access to the PC setting page.

3 Common Problems

Q: You cannot surf internet after setting up successfully?

A: Pls check the password whether is right .If not, pls enter the right password.

Q: The network speed is very slow after setting up successfully?

A: Pls enter the device status page to check whether the "Equipment and the main AP distance" is fit. If not, you can adjust the position of the repeater

How to check the status page: after connecting the extended WiFi successfully, you can enter the IP address 192.168.10.1 on mobile's browser or on PC to check the status of the repeater.

Note: Pls make sure that the IP address from upper network can't be 192.168.10.1

More questions, pls visit our main page:

www.szcomfast.com

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

**Manufacturer: Shenzhen Four Seas Global Link Network
Technology Co.,Ltd.Company**

**Address: Room 607-610,Block B Tao JINDI Electronic
Business Incubation Base, Tenglong Road, Longhua
District, Shenzhen, China**

Hotline: 0755 83790059/83790659

Website: www.szcomfast.com

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a **COMFAST** product and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to install, use, maintain, and store in accordance with the instruction manual causes product failure or damage;
- Exceeding the warranty period; Altering or tearing up the product barcode without authorization;
- Unauthorized modification of its own inherent setting files or unauthorized disassembly of the machine;
- Accidental factors or man-made damage to the product, such as improper input voltage, high temperature, water ingress, mechanical damage, breakage, severe oxidation or rust, etc.;
- Damages caused by transportation, loading and unloading caused by the customer during sending back for repair; product failures or damages caused by force majeure such as earthquakes, fires, lightning strikes, etc.; other failures or damages not caused by the product's own design, technology, manufacturing, quality, etc.

Customer Data

| | |
|-------------------------|--|
| Name | |
| Address | |
| Model | |
| MAC No. | |
| Machine unit sales | |
| Sale of machine address | |
| Date of sale machine | |
| TEL | |
| Post Code | |
| Invoice No. | |

Certificate Of Qualification

Quality Inspector _____

Production Date _____

Executive Standard _____



YD/T 1965-2009