

COMFAST

Quick Installation Guide




Wireless Router
Version 1.0


1 Equipment wiring

1.1 If you use broadband dial-up Internet access, please connect in sequence 1, 2, 3, 4 as shown in the figure below; If you use residential broadband to access the Internet, please connect in the order of 2, 3, 4 as shown in the figure, and connect the router. The WAN port directly accesses the broadband of the community.

Dial-Up Internet

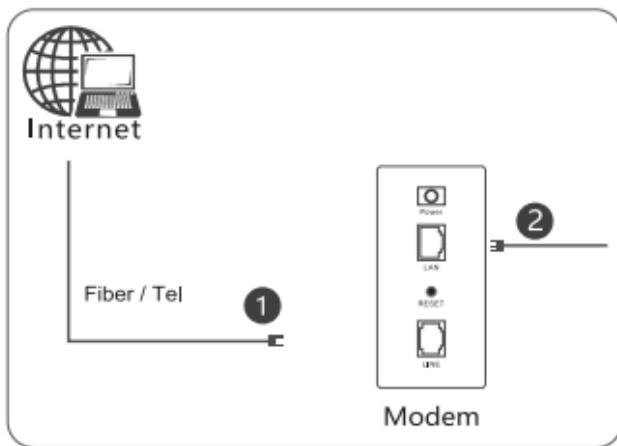

Broadband Internet

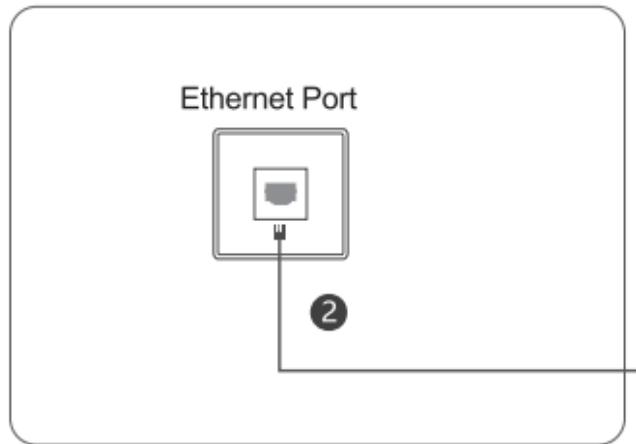


wireless connection


Search for wireless signals and connect the wireless name to COMFAST_XXXX_2G/5G (XXXX is the last four digits of MAC)



Power Socket

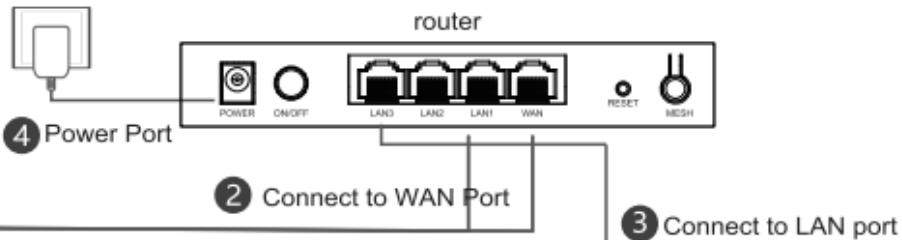


Wired connection

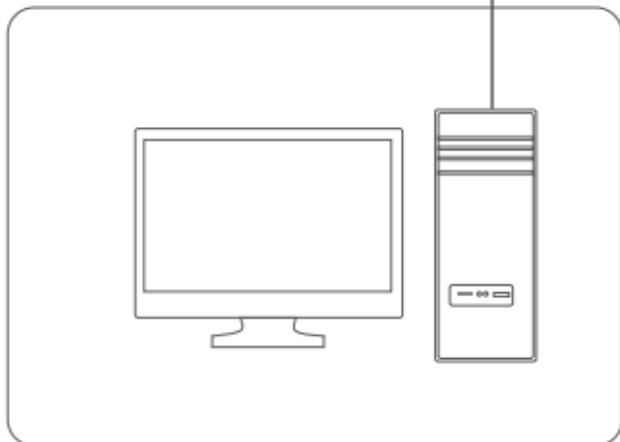

Special note: This manual is only for instructions on connecting to the Internet. If you have more functional requirements, please download the detailed operation manual from the COMFAST official website www.comfast.cn.

2 Fast networking

2.1 After connecting the routing device, enter 192.168.0.1 in the address bar of the computer (mobile phone) browser to enter the login page of the device. Enter the default username admin and the default password admin.

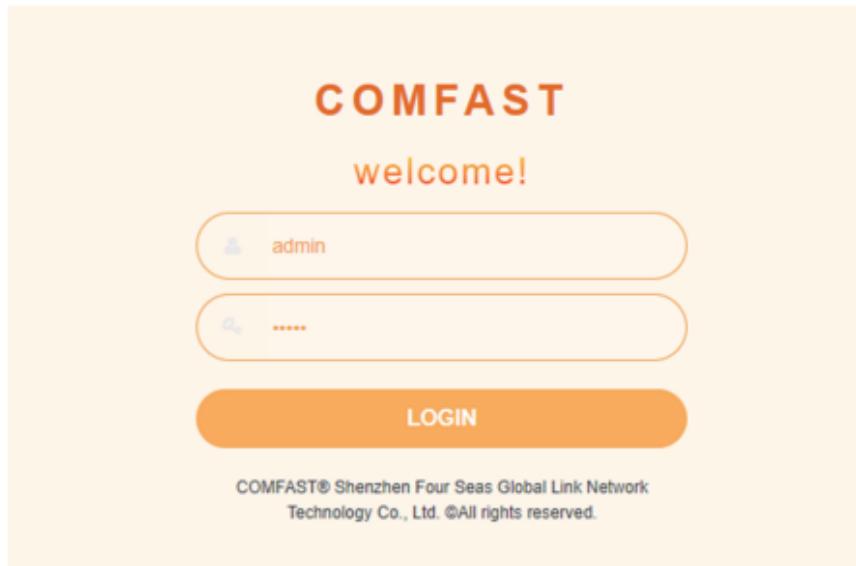

2.2 After logging in to the home page, modify the 2.4/5.8G network name and password in "Basic Settings" under "Wireless Settings" on the left menu bar of the home page.

Wireless

2.4GHz WiFi

Client Network

Wireless ON

Hide SSID OFF

Name/SSID	Encryption	Password/Key	LAN/VLAN
COMFAST_E0E1_2G	none		LAN

Admin Network

Advanced

Wireless

5.8GHz WiFi

Client Network

Wireless ON

Hide SSID OFF

Name/SSID	Encryption	Password/Key	LAN/VLAN
COMFAST_E0E1_5G	none		LAN

Admin Network

Advanced

2.3 Click "Save" and wait for 30 seconds for the wireless information configuration to take effect.



3 → FAQ

3.1 What should I do if I forget the password to log in to the device (how to reset the router)?

A. Forgetting the password to log in to the device can only restore the device to the factory default settings, that is, reset. There is a RESET button between the power port of the device and the WAN port. When the device is powered on, press the RESET button with your finger for about 7 seconds, the indicator light flashes 3 times quickly and then release it, the reset is successful.

Note: After reset, the router's default login IP is 192.168.0.1, and the original default login password is admin;

3.2 What should I do if I cannot log in to the management interface of the device?

A. Please make sure that the IP address of the computer and the login IP address of the device are in the same network segment: if the default login IP address of the device is 192.168.0.1, the computer IP address must be 192.168.0.X (x is any integer before 2-254) ;

B. Please make sure that the browser is set to "Never dial-up connection", and no proxy server is set; the method is as follows (take IE browser as an example): Select Tools-Internet Options-Connection, and select "Never dial-up connection" "; Click "LAN Settings" to remove the proxy server option.

C. You can try to change to another computer to log in; if the above prompt does not help you log in to the device, please restore the device to the factory and operate again.

3.3 Why can't my laptop search for wireless signals?

- A. If it is the built-in wireless network card of the laptop, please make sure that the wireless function switch is turned on (it is recommended to contact the pen vendor or consult the relevant manual);
- B. Check whether the wireless network card driver is successfully installed and whether the wireless network card is enabled in the device manager;
- C. Check whether the wireless service of the laptop is turned on, click My Computer on the desktop, and select Manage. Select "Services and Applications" in the computer management, and then check the status of "Wireless Zero Configuration" in the "Services page".
- D. Please make sure that the wireless function of the device is turned on and SSID broadcast is allowed.
- E. Try to see if the wireless signal can be searched at a close distance to avoid serious signal attenuation due to too many obstacles; if the above tips cannot help you, please confirm whether other wireless network cards can connect to the wireless router. If nothing works, please restore the device to factory settings.



Warning

1. Please remove the router's power supply and all connections during thunderstorms to avoid damage by lightning;
2. Keep away from heat sources and keep well ventilated;
3. Please pay attention to waterproof in storage, transportation and operation environment;
4. Use the power adapter attached to the router;
5. Place the equipment on a stable surface.

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company

Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China

Hotline: 4009-001-766

Website: en.comfast.com.cn