COMFAST

Quick Installation Guide

Hardware Installation
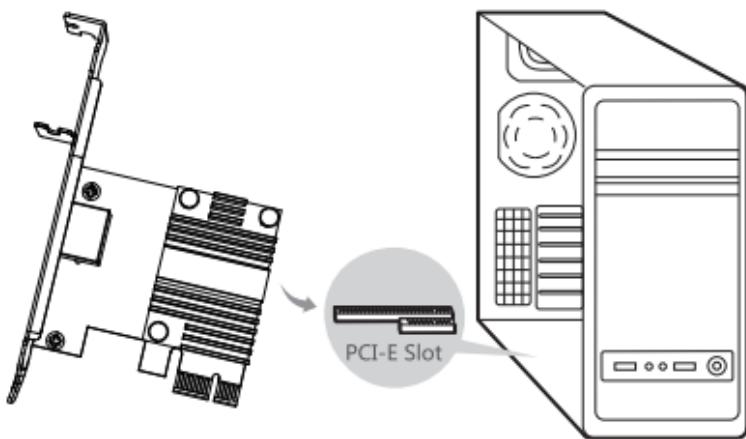
PCI-E Slot

1. Turn off the desktop PC and disconnect the power.
2. Open the main chassis, select an empty PCI-E slot on the motherboard, and remove the corresponding slot on the rear panel of the PC.
3. Insert the PCI-E NIC into the selected PCI-E slot and verify that all NIC pins are in contact with the slot; then secure the NIC to thechassis with screws; finally close the chassis
4. Plug in the PC again and turn on the PC.

Maintenance Regulations

Dear Valued Clients,

    Thank you for purchasing **COMFAST** products. To protect your rights and interessts in after-sales service, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage led to product failure or damage;

- Beyond the limited warranty , the warranty period; Unautorized alteratiion, tearing up the product bar code;

- Without authorization to change the settings file or inherent disassemble;

- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or oxidation product of serious,etc;

- Other non-product itself, design ,technology, manufacturing,quality and other quality problems caused by the failure damage.

Customer Data

Name	
Address	
Model	
MAC No.	
Machine unit sales	
Sale of machine address	
Date of sale machine	
TEL	
Post Code	
Invoice No.	

Certificate Of Qualification

Quality Inspector

Production Date

Executive Standard   YDAT 1965-2009

QC PASS

Copyright Information

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company
Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China
Hotline: +86 755 83790059
Website: en.comfast.com.cn